

## Magicpak Rewind Procedure

Only dealers that are already knowledgeable installing and changing graphics should attempt to rewind Magicpak units.

Caution – You must verify and remove all tension from unit before proceeding.

After all tension is removed you can remove the end cap screws from the Magicpak end cap with the slotted pin in the center of the end.

A rewind tool made from a piece of banner material 95” long x 2” wide is needed.

Remove the tension roller and attach the rewind tool with tape to the center of the leader film and manually roll the tool around the roller as if it were a banner.

Replace the roller leaving approximately 4” of the tool out of the housing where the graphic normally comes out. Hold the end of the rewind tool then replace the end cap screws using care not to allow the tool to slip back into the unit.

Pull the tool out of the housing until the leader film extends out, and then pin the unit to hold the tension. From this point follow the normal graphic replacement instructions.

# Set Up

**Applying a graphic to the Magicpak Retractable Banner System.**



**1.** Turn images with picture side facing down. Peel back small amount of protective strip on the top bar.



**2.** Place top bar against upper edge of image, remove protective strip. Press firmly.



**3.** Turn image & bar over and burnish down bar to insure good contact with adhesive.



**4.** Remove white protective strip from leader. Apply image, picture side up. Follow the blue line.



**5.** Apply image, picture side up. Follow the blue line as a guide.



**6.** Apply tape over joint on both sides.



**7.** Grip graphic & unit firmly with left hand. Maintain tight grip as you remove pin with right hand. (pin stores in slot)



**8.** Maintain a tight grip and gradually feed into roller mechanism.



**9.** Continue to maintain a tight grip and feed the entire image into the roller mechanism.



**10.** You're finished! Your Magicpak is ready to show.

**To interchange graphics:**

extend graphic all the way out of the unit and reinsert locking pin. Remove old graphics from leader. Use a new top bar (you will need to purchase a new top bar) and repeat installation steps.