


# ArchiForm® Modular Sign Systems

## Instructions for outdoor installation

1


Pressure treated four-by-two-by-six should be set into a concrete footing for additional strength and stability as necessary.

Four-by-two-by-six must be 24" or less above ground.

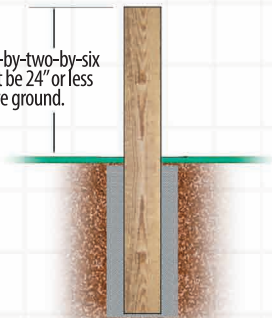


2

Fit the two columns into the pedestal base.

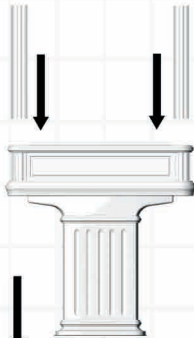

3


Lower the pedestal over the wood.

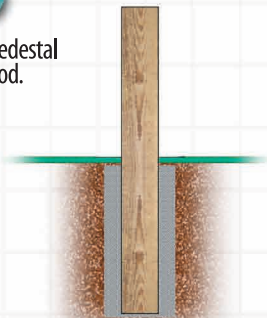

4

Slide the sign into the channels of the columns.

Lower the top onto the columns.

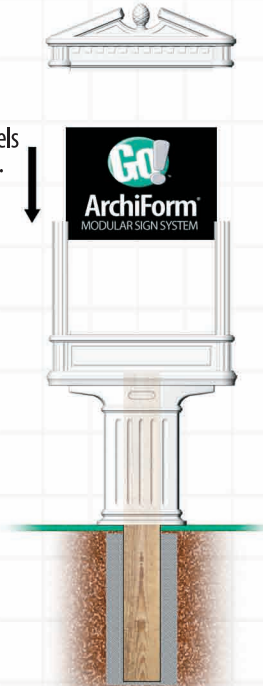

Visit [goExpogo.com](http://goExpogo.com)

**ExpoGo!**  
ExpoStar·Presenta·ArchiForm

(800)-891-1869