



Bridge and Header Instructions

1

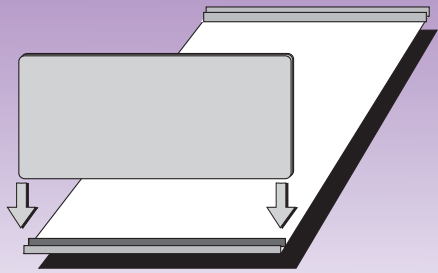


Place flexible panel face down on flat surface. Slip single panel into "U" Channel.

2

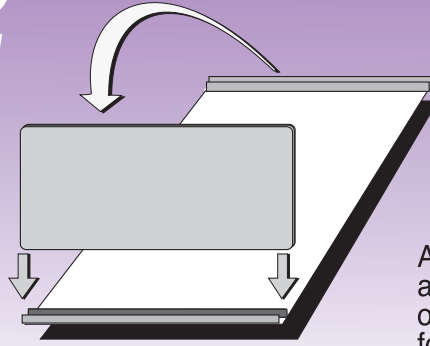


Arch panel forward and slide "U" Channel onto top of panel to form curved panel. Repeat for remaining curves, top and bottom.

3

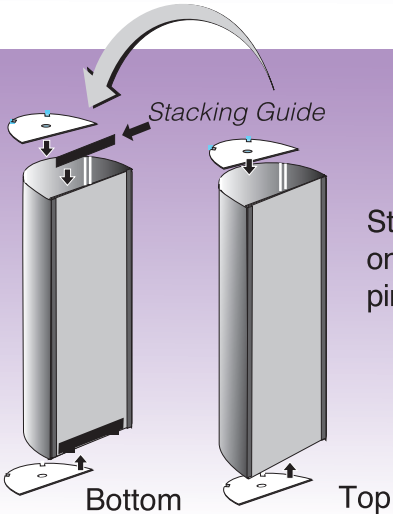

Stack upper column on base column by aligning pins and stacking guide in panel.

Finished Bridge Curve

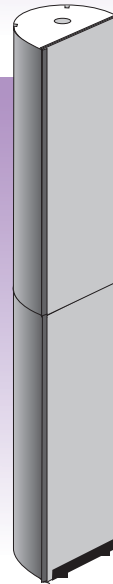

Header attachment

Shorter hook goes on center section side

BRIDGE HEADER INSTRUCTIONS

1. Join clear plex headers together by sliding connecting pins into channels.
2. Hang header between Curve and Center section.
3. Slide lightbar onto hanging bars and join bars with pins
4. Hang lightbars between Curve and Center section.
5. place soffit panel between Curve and Center section. magnet side down, and allow magnets on top of bottom rail on header to snap to soffit panels.

